 
 
 
 


**17-inch Color Monitor**  
**Moniteur couleur 17"**  
**17 Zoll Farbmonitor**  
**Monitor en color de 17 pulgadas**  
**Color Monitor da 17 pollici**  
**17" färgbildskärm**  
**17インチカラーモニター**  
**17 인치 칼라 모니터**  
**17-英寸彩色显示器**  
**17-英寸彩色顯示器**

**Owner's  
Instructions**





# 17-inch (16-inch viewable) Color Monitor

## Owner's Instructions

 


## Safety Instructions

- 1** Before connecting the AC power cord to an outlet, make sure the voltage designation on your monitor corresponds to the local electrical supply.
- 2** Never insert anything metallic into the monitor openings. Doing so may create the danger of electric shock.
- 3** To avoid electric shock, never touch the inside of the monitor. Only a qualified technician should open the monitor's case.
- 4** Never use your monitor if the power cord has been damaged. Do not allow anything to rest on the power cord, and keep the cord away from areas where people can trip over it.
- 5** Be sure to hold the plug, not the cord, when disconnecting the monitor from an electric socket.
- 6** Openings in the monitor cabinet are provided for ventilation. To prevent overheating, these openings should not be blocked or covered. Also, avoid using the monitor on a bed, sofa, rug, or other soft surface. Doing so may block the ventilation openings in the bottom of the cabinet. If you put the monitor in a bookcase or some other enclosed space, be sure to provide adequate ventilation.
- 7** Put your monitor in a location with low humidity and a minimum of dust.
- 8** Do not expose the monitor to rain or use it near water (in kitchens, near swimming pools, etc.). If the monitor accidentally gets wet, unplug it and contact an authorized dealer immediately. You can clean the monitor with a damp cloth when necessary, but be sure to unplug the monitor first.
- 9** Place the monitor on a solid surface and treat it carefully. The screen is made of glass and can be damaged if dropped, hit or scratched.
- 10** Locate your monitor near an easily accessible AC outlet.
- 11** If your monitor does not operate normally – in particular, if there are any unusual sounds or smells coming from it – unplug it immediately and contact an authorized dealer or service center.
- 12** High temperatures can cause problems. Don't use your monitor in direct sunlight, and keep it away from heaters, stoves, fireplaces, and other sources of heat.
- 13** Unplug the monitor when it is going to be left unused for an extended period of time.
- 14** Unplug your monitor from the AC outlet before any service.




**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN






 
**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK,  
DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE.  
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.





# Table of Contents

    Your New Monitor	2
Installing Stand	2
Connecting Your Monitor	3
Front Panel	4
Direct Access Buttons	4
Operation	5
On-screen Menu System	5
Monitor function control	6
Brightness	6
Contrast	6
Horizontal Position	6
Vertical Position	6
Horizontal Size	6
Vertical Size	5
Pincushion	7
Geometry	7
Trapezoid	7
Parallelogram	7
Rotation	7
Pinbalance	7
V-Linearity	7
Language	8
Advanced	8
H- Moiré	8
V- Moiré	8
Video Input Level	8
Color Temperature	8
Halftone	8
Zoom	9
Degauss	9
Recall	9
Display Timing	9
OSD Lock/Unlock	9
Troubleshooting	10
PowerSaver	11
Display Modes	11
Specifications	12
Index	13
Regulatory Information	14






# Your New Monitor


Please make sure the following items are included with your monitor. If any items are missing, contact your dealer.



Manual



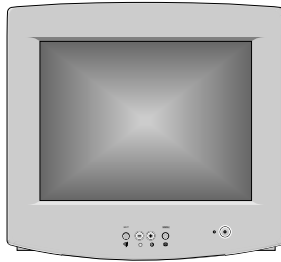


Monitor

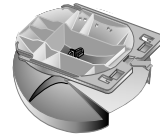


Stand

## Installing Stand

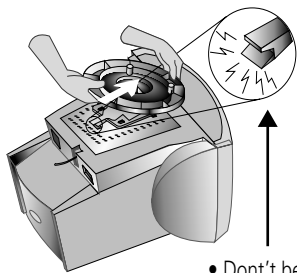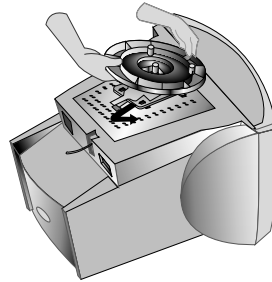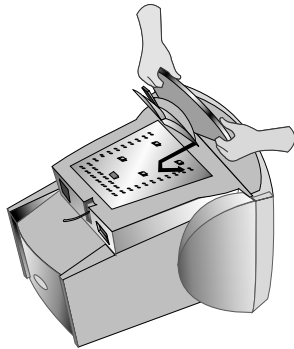


• Don't bend the snap.

 - This stand is applicable to several monitors. Your monitor may look different, but the installation procedure is the same.



## Your New Monitor

### Connecting Your Monitor

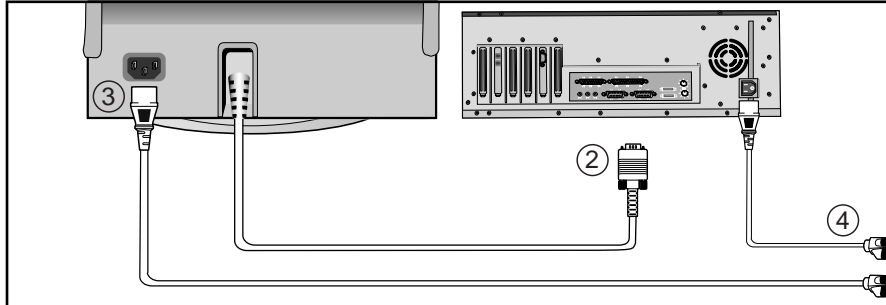

**1** Turn off your computer and unplug the power cord. Attach the base stand to the monitor.

**2** **Signal cable**  
Connect the end of the signal cable to your computer's video port (Video board, video card, or graphics card).


**3** **Power port**  
Connect the power cord for your monitor to the power port on the back of the monitor.

**4** **Power cords**  
Plug the power cord for the monitor and the power cord for your computer into a nearby outlet.

**5** Turn on your computer and monitor. If your monitor displays an image, installation is complete.


# Your New Monitor

## Front Panel

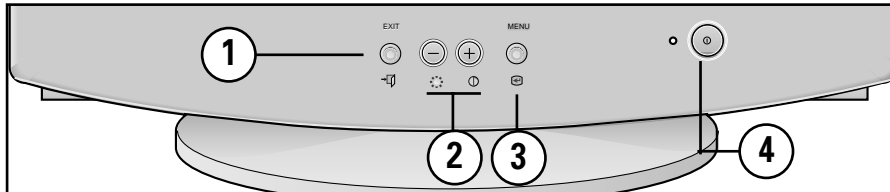

- 1 EXIT (→) button**  
Closes the on-screen menu. It is also used to return to the previous menu when using the on-screen menu system.
- 2 The (−) / (+) (☀) / (●) buttons**  
These buttons allow you to select and adjust items using the on-screen menu. When adjusting an item using the on-screen menu, the (−) button lowers the value of the selected function. The (+) button raises the value of the selected function. These buttons are also direct access buttons for the Contrast and
- 3 MENU (≡) button**  
Opens the on-screen menu. It is also used to select a highlighted function, open a sub-menu, or move between menus when using the on-screen menu system.
- 4 Power button**  
The power button turns the monitor on and off. The power indicator light glows green during normal operation, see page 11.

## Direct Access Buttons

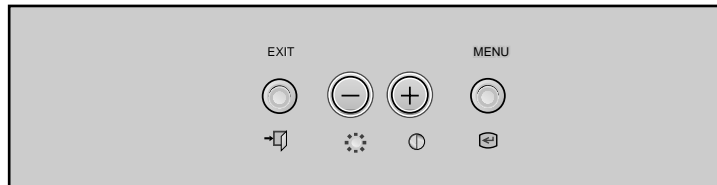














Most of the adjustments you make to your monitor will be accessed through the on-screen menu described in the next section. The Contrast and Brightness features can also be accessed directly from the front of your monitor.


- 1** With the menu off, press the ☀ or ● button on the front of your monitor. The ☀ button accesses the Brightness feature. The ● button accesses the Contrast feature.
- 2** Push the (+) button to increase or the (−) button to decrease the value of the selection.
- 3** Press the EXIT button → twice to exit the on-screen menu.

# Operation

## On-screen Menu System

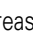Your monitor has an on-screen menu system, accessed by the buttons on the front of your monitor, that allows you to adjust characteristics of the screen image. Display changes are indicated by on-screen adjustment icons. Some functions have sub-menus.

- 1** Push the menu button  to display the main menu. Function icons are arranged across the top of the on-screen menu.
- 2** Push the  or  button to move through the icons. The name of the function will appear below the rows of function icons.
- 3** To select a function or open a sub-menu, push the  button. The screen will display the options for adjustment. If there is a sub-menu, use the  or  button to highlight the feature you want to adjust, then push the  button to select it.
- 4** Use the  and  buttons to make adjustments.  increases values and  decreases values. On-screen calibration numbers show the effect of your adjustment. If you are in a sub-menu, use the EXIT button  to return to the previous menu.
- 5** Push the EXIT button  to exit and save your changes.

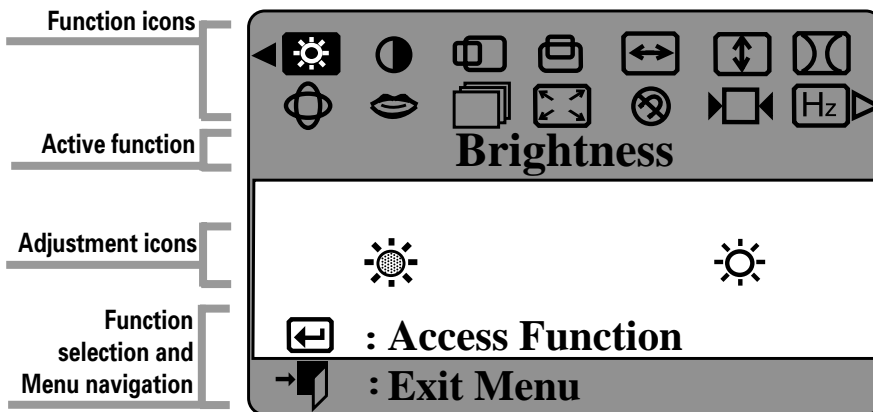



# Operation

## Icon Monitor Function Control




### Brightness

Background brightness of screen.  
 - Decreases brightness  
 + Increases brightness




### Contrast

Contrast of screen image.  
 - Decreases contrast  
 + Increases contrast

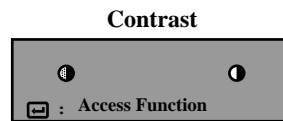


### Horizontal Position

 Horizontal screen position.  
 - Moves screen left  
 + Moves screen right




### Vertical Position

 Vertical screen position.  
 - Moves screen down  
 + Moves screen up




### Horizontal Size

 Horizontal screen size.  
 - Decreases size  
 + Increases size



### Vertical Size

 Vertical screen size.  
 - Decreases size  
 + Increases size




# Operation

## Icon Monitor Function Control



### Language


– and + scroll through on-screen language options.  
 (English/ Deutsch/ Francais/ Italiano  
 Português/ Español/ Svenska/ Russian/  
 Korean)

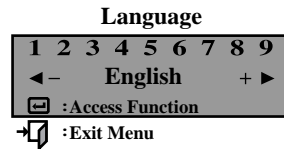


### Advanced



**H- Moiré**  
 Corrects for on-screen moiré pattern.  
 – and + clear Horizontal Moiré

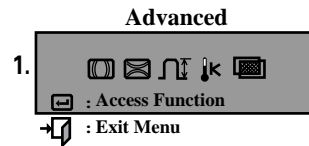

**V- Moiré**  
 Corrects for on-screen moiré pattern.  
 – and + clear Vertical Moiré

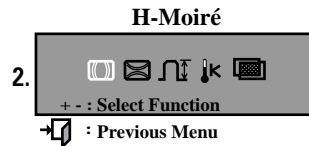

**Video Input Level**  
 Selects the video signal level  
 – Select 0.7 V  
 + Select 1.0 V



**Color Temperature**  
 – 9300k more blue  
 + 6500k more red



**Halftone**  
 – Off  
 + On



# Operation

## Icon Monitor Function Control



### Zoom

- Reduces view of display area
- + Enlarges view of display area

### Zoom



### Degauss

Removes color distortion caused by magnetic fields. Do not use more than once in 30 minutes.

### Degauss



### Recall

- Returns monitor to original settings.
- No
  - + Yes

 
### Recall



### Display Timing


- Monitor display settings.
- Factory timing
  - + User timing

### Display Timing



### OSD Lock/Unlock

Allows you to secure the current control settings so that they cannot be inadvertently changed. You can unlock the OSD controls at any time by using the same procedure.

 
- Push and hold the Menu (  ) button for 10 seconds or more to Lock or to Unlock.

### OSD Lock/Unlock

#### Control Lock

Locked





# Troubleshooting

---

Before calling for service, check the information in this section to see if you can solve the problem yourself. If you do need assistance, please call the phone number on the warranty card, the phone number on the back cover of this manual, or contact your dealer.

## **There is no screen image**

- Check to see that both the monitor and the computer are plugged in and turned on.

## **“No Connection, Check Signal Cable” appears**

- Check the signal cable connection between the computer and the monitor.

## **“Sync. Out of Range” appears**

- The input signal frequency is over or under the synchronization range of the monitor, see “Specifications” on page 12.

## **The screen image is too light or too dark**

- Adjust the brightness or contrast settings, see page 6.

## **The screen image is too large or too small**

 
- Adjust the size settings, see H-size and V-Size on page 6.
- Adjust the Zoom setting, see page 9.

## **The colors are distorted with dark or shadowed areas**

- Activate the degauss feature, see page 9.
- Adjust the color temperature, see page 8.

## **The power indicator light is blinking green**

- The monitor is using its power management system, see “PowerSaver” on page 11.



## PowerSaver

This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal operation when you move the computer's mouse or press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPMS compliant video card installed in your computer. Use a software utility installed on your computer to set up this feature.

State	Normal Operation	Power Saving function mode EPA/NUTEK		
		Standby mode	Suspend mode Position A1	Power-off Mode Position A2
Power Indicator	Green	Green, Blinking (0.5 sec. interval)	Green, Blinking (1.0 sec. interval)	Green, Blinking (2.0 sec. interval)
Power Consumption	90 W (Maximum) 75 W (Nominal)	60 W (Nominal)	Less than 10 W	Less than 3 W

**NOTE:** This monitor is EPA Energy Star® compliant and NUTEK compliant when used with a computer equipped with VESA DPMS functionality.

 
## Display Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync. Polarity (H/V)
VESA, 800 x 600	46.875	75.000	49.500	+/+
VESA, 1024 x 768	60.023	75.000	78.750	+/+
SUN, 1024 x 768	62.040	77.069	84.375	-/-
VESA, 1024 x 768	68.700	85.000	94.500	+/+
SUN, 1152 x 900	61.846	66.003	94.500	-/-
SUN, 1152 x 900	71.810	76.150	108.00	-/-

## Specifications

Specifications	Model: DP 17MO
Picture Tube	<ul style="list-style-type: none"> <li>• 17" (43 cm) Full square type, 16" (40.6 cm) Viewable</li> <li>• 90 Deflection</li> <li>• 0.28 mm Dot pitch</li> <li>• Silica coated with anti-electrostatic properties (TCO: Multilayer coating)</li> <li>• Medium-short persistence phosphor</li> </ul>
Synchronization	<ul style="list-style-type: none"> <li>• Horizontal: 30 kHz to 75 kHz</li> <li>• Vertical: 50 Hz to 160 Hz</li> </ul>
Display Color	<ul style="list-style-type: none"> <li>• Unlimited</li> </ul>
Maximum Resolution	<ul style="list-style-type: none"> <li>• 1152 Dots</li> <li>• 900 Lines</li> </ul>
Active Display (Default)	<ul style="list-style-type: none"> <li>• Horizontal: 11.8 ± 0.16 inch (300.0 ± 4 mm)</li> <li>• Vertical: 8.9 ± 0.16 inch (225.0 ± 4 mm)</li> </ul>
Input Signal, Terminated	<ul style="list-style-type: none"> <li>• Analog: .7 Vpp positive at 75 ohms</li> <li>• Separate Sync.: TTL level, positive or negative</li> </ul>
Maximum Pixel Clock	<ul style="list-style-type: none"> <li>• 130 MHz</li> </ul>
Power Supply	<ul style="list-style-type: none"> <li>• AC 100-240 V ± 10%, 60 Hz/50Hz ± 3Hz</li> </ul>
Power Consumption	<ul style="list-style-type: none"> <li>• 90 W maximum</li> </ul>
Dimensions/Weight (WxDxH)	<ul style="list-style-type: none"> <li>• Unit: 16.22 x 16.54 x 16.36 inch/33.1 lbs. (412 x 420 x 415.5 mm/15.0 kg)</li> <li>• With Carton: 21.02 x 21.73 x 18.39 inch/38.6 lbs. (534 x 552 x 467 mm/17.5 kg)</li> </ul>
Environmental Considerations	<ul style="list-style-type: none"> <li>• Operating temperature: 32 F to 104 F (0 C to 40 C)</li> <li>Humidity: 10% to 80%</li> <li>• Storage temperature: -4 F to 113 F (-20 C to 45 C)</li> <li>Humidity: 5% to 95%</li> </ul>

*Design and specifications are subject to change without notice.*



# Index

---

## A

Advanced, 8

## B

Brightness, 4, 5, 6

Button , 4

Buttons,  /  ( / ) , 4

## C

Color temperature, 8

Connecting your monitor, 3

Contrast, 4, 6

## D

Degauss, 9

Direct access buttons, 4

Display modes, 11

Display timing, 9

## F

Front panel, 4

## G

Geometry, 7

## H

Halftone, 8

H- Moiré, 8

Horizontal position, 6

Horizontal size, 6

## I

Installing stand, 2

## L

Language, 8

## M

Menu button, 4

Monitor function control, 6, 7, 8, 9

## O

Operation, 5, 6, 7, 8, 9

On-screen menu system, 5


OSD Lock/Unlock, 9

## P

Parallelogram, 7

Pinbalance, 7

Pincushion, 7

Power button , 4

Power cords, 3

Power port, 3

PowerSaver, 11

## R

Recall, 9

Rotation, 7

## S

Specifications, 12

## T

Trapezoid, 7

Troubleshooting, 10

## V

Vertical position, 6

Vertical size, 6

Video input level, 8

V-linearity, 7

 
 
 
 
 
V- Moiré, 8

## Y

Your new monitor, 2, 3, 4

## Z

Zoom, 9



## Regulatory Information

### FCC Information

#### Declaration of conformity for products Marked with FCC Logo

We hereby declare that this device complies with Part 15 FCC Rules.

Operation is subject to the following two conditions :

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

### User Instructions

The Federal Communications Commission Radio Frequency Interference Statement includes the following warning:

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### User Information

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If necessary, consult your dealer or an experienced radio/television technician for additional suggestions. You may find the booklet called *How to Identify and Resolve Radio/TV Interference Problems* helpful. This booklet was prepared by the Federal Communications Commission. It is available from the U.S. Government Printing Office, Washington, DC 20402, Stock Number 004-000-00345-4.

### Warning

User must use shielded signal interface cables to maintain FCC compliance for the product.

Provided with this monitor is a detachable power supply cord with IEC320 style terminations. It may be suitable for connection to any UL Listed personal computer with similar configuration. Before making the connection, make sure the voltage rating of the computer convenience outlet is the same as the monitor and that the ampere rating of the computer convenience outlet is equal to or exceeds the monitor voltage rating.

For 120 Volt applications, use only UL Listed detachable power cord with NEMA configuration 5-15P type (parallel blades) plug cap. For 240 Volt applications use only UL Listed Detachable power supply cord with NEMA configuration 6-15P type (tandem blades) plug cap.

### IC Compliance Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations of ICES-003.

### VCCI Information

This equipment is in the Class B category (information equipment to be used in a residential area or an adjacent area there-to) and conforms to the standards set by the Voluntary Control Council For Interference by Data Processing Equipment and Electronic Office Machines aimed at preventing radio interference in such residential area. When used near a radio or TV receiver, it may become the cause of radio interference. Read the instructions for correct handling.

### MPR II Compliance

This monitor complies with SWEDAC (MPR II) recommendations for reduced electric and magnetic fields.

### European Notice

Manufacturer: Samsung Electronics Co., Ltd.

Products with the CE Marking comply with both the EMC Directive (89/336/EEC), (92/31/EEC), (93/68/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms:

- EN55022 (CISPR 22) – Radio Frequency Interference
- EN50082-1 : 1992 – Electromagnetic Immunity
- EN60555-2 (IEC555-2) – Power Line Harmonics
- EN60555-3 (IEC555-3) – Voltage Fluctuations
- EN60950 (IEC950) – Product Safety



# FCC Declaration of Conformity

According to 47 CFR, Parts 15 of the FCC Rules

**\* For the following named product :**

COLOR MONITOR  
(Category Name)

DP17MO / SAMSUNG  
(Model No / Brand Name)

DP17M\*  
(Basic Model)

**\* Manufactured at :**

SAMSUNG ELECTRONICS CO., LTD

We hereby declare that this device complies with Part 15 FCC Rules.  
Operation is subject to the following two conditions ;

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received,  
including interference that may cause undesired operation.

**\* FCC Rules :**

Tested to comply with FCC part 15, class B

**\* Test site at :**

Compliance Engineering Services, Sunnyvale, CA, USA

 
 
**\* Responsible Party for Product Compliance**

America QA Lab of Samsung  
85 West Tasman Drive, San Jose, CA 95134  
Tel)408-544-5124 Fax)408-544-5191

**\* Manufacturer Information**

SAMSUNG ELECTRONICS CO.,LTD.  
416, Maetan-3Dong, Paldal-Gu  
Suwon City, Kyungki-Do, Korea,  
442-742 2000-02-15  
(place and date of issue)

Display Division  
EMC/SAFETY GROUP  
Senior Manager/  
Chai Gwang Lim  
(name and signature of authorized person)



**875 - 1889 - 01**

P/N : BH68-00049B-01



EPA POLLUTION PREVENTER

Printed on recyclable paper

